

underexposed, 39, 40, 63, 67, 68, 101
UV filter, 1, 37, 45, 93

viewfinder, 1, 7, 29–35, 37,
39, 48, 50, 60, 65, 67,
68, 101, 105, 106, 108,
110
_ window, 30, 31, 34, 109 external _, 34–37
vignetting, 37, 91
Visoflex 2, 32, 33

well exposed, 40, 68
Wikipedia, 2, 5

Contents

1 The Leica M11-P Camera	1
2 Preparation of the Leica M11	3
2.1 Inserting a SD Card and the Battery 4
2.2 Initialize your SD card (the first time only)	. 7
2.3 Menus 10
2.4 Mounting a lens 11
3 The First Photo With a Leica M11	13
4 Silent Deactivation and Reactivation	19
5 Light	20
6 Darkroom	21
7 Lenses of Different Focal Lengths	23